

Translation of the original manual

english

Elmasonic Easy

Ultrasonic cleaning unit



Copyright © 2023 Elma Schmidbauer GmbH. All rights reserved.

Elma Schmidbauer GmbH Gottlieb-Daimler-Strasse 17 78224 Singen (Germany) www.elma-ultrasonic.com

Technical support: Tel: + 49 (0)77 31 882 280 Email: support@elma-ultrasonic.com

Subject to technical and visual modifications.

Contents

1	Abo	ut this manual	4					
	1.1	User	4					
	1.2	Other applicable documents	4					
	1.3	CE mark	4					
2	Prop	Proper use 5						
	2.1	Ultrasonic cleaning	5					
3	Safe	ty	5					
	3.1	The structure of warnings	5					
	3.2	Meaning of symbols on the unit	5					
	3.3	Meaning of symbols on the nameplate	6					
	3.4	Safety information on specific types of	0					
	5.4		6					
4	Use	of cleaning agents	8					
	4.1	Permissible cleaning agents	8					
	4.2	Cleaning agents	8					
5	Tech	inical data	9					
	5.1	Elmasonic Easy 10, 10H, 20, 20H	9					
	5.2	Elmasonic Easy 30, 30H, 40H, 60H	9					
	5.3	Elmasonic Easy 100H, 120H, 180H, 300H 1	0					
	5.4	Elmasonic Easy 10-300 1	1					
6	Prod	luct contents 1	2					
7	Unit	description 1	3					
8	Cont	rols 1	4					
	8.1	Operating modes 1	5					

9	Set u	p and connect the unit	15
	9.1	Notes on installation site	15
	9.2	Set up the unit	16
	9.3	Connect the unit	16
10	Fill th	ne tank	17
	10.1	Dosing cleaning agent	18
	10.2	Degassing the liquid	18
11	Inser	t objects to be cleaned	19
12	Oper	ating the unit	20
	12.1	Set the cleaning duration	20
	12.2	Changing ultrasound mode	21
	12.3	Setting cleaning temperature	21
	12.4	Starting/stopping ultrasonic cleaning	22
	12.5	Remove cleaned objects	22
13	Drain	the unit	23
14	Malfu	inctions/fault messages	24
	14.1	Troubleshooting	24
	14.2	Fault messages	24
15	Main	tenance	25
	15.1	Replace the network cable	25
	15.2	Clean enclosure	25
	15.3	Cleaning the tank	25
	15.4	Disinfect	26
	15.5	Clean the blower and check that it is working correctly (sizes 120 and up)	~~~
16	Dispo	osal	26

1 About this manual

IMPORTANT Please read the manual before using the product. This manual forms part of the contents supplied with the unit. Keep the manual in an accessible place close to the product, and keep it with the product if it is sold on.

Meaning of the symbols used:

- This symbol denotes lists.
- \checkmark This symbol denotes requirements.
- 1. Numbers with a dot denote actions.
- This symbol denotes individual actions.
- This symbol denotes interim results.
- → This symbol denotes the result of an action.
- 1 Numbers without a dot denote image labels.

1.1 User

In the manual, the term User refers to all persons who transport, set up, connect, operate and maintain the unit. The manual is aimed at persons with appropriate technical knowledge and experience in handling similar units.

The user is at least 16 years old. They must have read and understood the manual and be capable of following all notes and instructions.

All tasks that go beyond the pure operation of the unit within the scope described here must be performed by qualified and authorised specialists.

1.2 Other applicable documents

In addition to the specifications given in this manual, the following documents and directives also apply and may take precedence. This list is not exhaustive:

- Regional safety regulations and other locally applicable provisions.
- Safety data sheet and dosing instructions of the cleaning agents used.

1.3 CE mark

This unit fulfils CE marking requirements in line with EU (EC/EEC) directives. Details are stated in the EU declaration of conformity that can be obtained from the manufacturer.

Technical changes to the unit must be approved by the manufacturer. The unit is no longer CE compliant if opened by an unauthorised person.

2 Proper use

2.1 Ultrasonic cleaning

Only use the product in line with the listed specifications.

Using the unit in any other way is considered improper use.

- The product is intended for ultrasonic cleaning of objects with liquids.
- Do not use flammable liquids.
- Do not clean living creatures or plants.
- The product is only suitable for use in rooms.
- The product is designed for liquids that do not produce any vapours harmful to humans. If such liquids are used, extra safety measures must be implemented e.g., personal protective equipment.
- The user is responsible for assessing the cleaning results.
- Only authorised, qualified personnel who are familiar with the manual may operate this product. Unauthorised persons, in particular children, must not use this product.
- Only use original accessories made for this product.

3 Safety

3.1 The structure of warnings



SIGNALWORD

Type and source of the danger

Possible consequences of the danger if disregarded.

 \succ Measures to prevent the danger.

Signal word	Meaning	Consequences if disregarded
DANGER	Immediate danger	Death or serious injury
WARNING	Possible dangerous situation	Death or serious injury
CAUTION	Possible dangerous situation	Slight injuries, damage to components or units
NOTICE	Useful advice or tip	No risk of personal injury, but possible damage to components or units

Table 1: Meaning of the signal words

3.2 Meaning of symbols on the unit



3.3 Meaning of symbols on the nameplate

\triangle	Attention
Í	Read the manual
	Manufacturer
\sim	Date of production
REF	Order number
SN	Serial number
CE	CE mark
UK CA	UK Conformity Assessment marking
UVITHERE IN	cTUVus marking for Canada and USA
	Disposal information

3.4 Safety information on specific types of hazard

Electrical power

Contact with live components can lead to serious injury or death due to electrocution!

- Do not connect the unit to the power supply if the connection cables or other components are visibly damaged.
- Keep the enclosure and control elements clean and dry.
- Protect the unit against penetrating moisture.
- The mains voltage and the connected load on the nameplate must correspond to the on-site connection conditions.
- Only operate the unit in power circuits that are protected by a fault-current circuit breaker.

Risk of fire and explosion

Critical injuries, burns

- Do not fill the cleaning tank with flammable liquids.
- · Only use cleaning agents that are approved for this unit.
- · In case of doubt, ask the manufacturer or supplier.

Infections

Danger of possible infection due to poor cleaning results, dirty cleaning fluid and insufficient maintenance and disinfection of the unit.

- Change the cleaning fluid when it becomes visibly dirty and at least once per day.
- Clean the tank and surfaces thoroughly after draining the fluid and disinfect, if necessary.
- Check the cleaning results. The operator is responsible for monitoring the cleaning results.

Hot liquids and surfaces

Danger of burns and scalds due to contact with hot fluids or surfaces caused by high operating temperatures or continuous ultrasound operation.

- Do not touch the surfaces, accessories or objects being cleaned.
- Danger of splashes caused by high temperatures, by switching on ultrasound operation or by careless insertion of the basket or objects. If necessary, wear suitable protective equipment.
- If work must be performed on hot components, switch off the unit and allow to cool. If necessary, wear suitable protective equipment.

Cleaning agents

Volatile, corrosive or aggressive cleaning agents can cause chemical burns to the skin and respiratory tract.

- Observe the safety data sheet when using cleaning agents.
- Wear the protective equipment stipulated in the safety data sheet.
- Where necessary, provide adequate extraction for the emitted vapours and regularly check that the extraction system is working correctly.
- Observe the information stipulated in the *Cleaning agents* chapter. In case of doubt, ask the manufacturer or supplier.

Ultrasound-conductive liquids and materials

Ultrasound damages the cell membranes and bone structure.

- Do not reach into the ultrasonic bath during ultrasound operation.
- During ultrasound operation, do not touch any parts that conduct ultrasound, such as the tank, basket or any accessories used.

Ultrasound noise emissions

Working with ultrasonic cleaning units for longer periods of time can damage your hearing.

- Use the lid or wear personal ear protection when working on ultrasonic units.
- Pregnant women must not be subjected to the noise emissions for longer periods of time.
- Keep animals away from the vicinity of ultrasonic devices.

Electromagnetic radiation

 No binding statement can be made for persons with active medical implants, such as pacemakers or implanted defibrillators. A binding statement can only be made for specific workstations and in consultation with the implant manufacturer.

4 Use of cleaning agents

A cleaning agent can be added to the liquid in the tank to improve the cleaning results.

If using cleaning agents, observe and apply the instructions stated in the safety data sheet and product information.

Also observe the following information:

4.1 Permissible cleaning agents

- Only use aqueous cleaning agents for ultrasonic cleaning.
- Only use cleaning agents that are suitable for ultrasonic cleaning.

Elma provides a wide range of aqueous cleaning agents developed in-house that are optimised for ultrasonic cleaning.

A list of Elma cleaning agents can be found here:

https://www.elma-ultrasonic.com/en/products/cleaning-chemistry

4.2 Cleaning agents

Use of aggressive, corrosive cleaning agents:

Aggressive, corrosive cleaning agents can cause severe chemical burns if they come into contact with eyes or skin. Insufficient ventilation can result in severe chemical burns to the respiratory tract.

- Before using any cleaning agents, read the safety data sheet and product information and observe and apply the instructions.
- Where necessary, install an effective extractor system for the emitted vapours (e.g. at higher temperatures) and regularly check that the extractor system is working correctly.
- Never reach into the tank when filled with cleaning agent.
- · Wear suitable protective equipment in line with the safety data sheet.

Danger of fire or explosion when using combustible cleaning agents

Ultrasound and heat increase the evaporation of liquids and form extremely fine mists that readily ignite on contact with sources of ignition. This can result in severe burns or death.

- Do not use cleaning agents that are labelled with the pictograms GHS01 (explosive), GHS02 (flammable) or GHS03 (oxidising) in line with the CLP regulation (EC no. 1272/2008). Do not use cleaning agents that have a flashpoint.
- If necessary, clarify the cleaning agents that can be used by consulting the manufacturer or supplier.







GHS01

GHS02

GHS03

Table 2: GHS pictograms for explosive, flammable or oxidising substances

Damage to stainless-steel tank caused by unsuitable cleaning agents

Unsuitable cleaning agents can cause pitting and therefore damage the stainless-steel tank within a short time.

- Consult the unit and cleaning agent manufacturers to clarify whether the cleaning agent is suitable.
- Do not use any cleaning agents in the acidic pH range at the same time as halides, such as fluoride, chloride, bromide or iodide.
- Only use cleaning agents that are suitable for ultrasound applications.

5 **Technical data**

5.1 Elmasonic Easy 10, 10H, 20, 20H

Mechanical dataMax. external dimensions W/D/Hmm $235 / 130 / 200$ $215 / 190 / 230$ Max. opening dimensions W/D (inside of tank above stacking collar)mm $190 / 85$ $150 / 135$ Interior dimensions W/D (tank below fill level marking)mm $185 / 80$ $140 / 125$ Fill level (tank base to fill level marking)mm 30 40 Working height (basket base to fill level marking)mm 30 40 Max. basket loading (original accessories)kg $1,0$ $1,0$ Max. basket loading (arginal accessories)kg $2,0$ $2,1$ Performance dataL $0,9$ $1,6$ $2,1$ Performance dataW 30 90 35 155 Ultrasonic power effective ± 10 %W 30 90 35 155 Ultrasonic peak performance max.W 240 280 280 Heating powerW 0 -120 120						
Max. external dimensions W/D/H (unit with cover)mm $235 / 130 / 200$ $215 / 190 / 230$ Max. opening dimensions W/D (inside of tank above stacking collar)mm $190 / 85$ $150 / 135$ Interior dimensions W/D (tank below fill level marking)mm $185 / 80$ $140 / 125$ Fill level (tank base to fill level marking)mm 40 60 Working height (basket base to fill level marking)mm 30 40 Interior dimensions of basket W/D/H (original accessories)mm $155 / 70 / 35$ $110 / 105 / 50$ Max. basket loading (original accessories)kg $1,0$ $1,0$ Total volumeL $0,9$ $1,6$ Recommended tank operating capacityL $0,7$ $1,2$ Weight (unit with cover)kg $2,0$ $2,1$ Performance dataW 30 90 35 155 Ultrasonic power effective ± 10 %W 30 90 35 152 Ultrasonic peak performance max.W 240 280 120 Heating powerW $ 60$ $ 120$	Elmasonic Easy	Unit	10	10H	20	20H
nmm235 / 130 / 200215 / 190 / 230Max. opening dimensions W/D (inside of tank above stacking collar)mm $190 / 85$ $150 / 135$ Interior dimensions W/D (tank below fill level marking)mm $185 / 80$ $140 / 125$ Fill level (tank base to fill level marking)mm 40 60 Working height (basket base to fill level marking)mm 30 40 Interior dimensions of basket W/D/H (original accessories)mm $155 / 70 / 35$ $110 / 105 / 50$ Max. basket loading (original accessories)kg $1,0$ $1,0$ Total volumeL $0,9$ $1,6$ Recommended tank operating capacityL $0,7$ $1,2$ Performance dataTotal power consumptionW 30 90 35 155 Ultrasonic power effective ±10 %W 30 90 35 152 Ultrasonic peak performance max.W 240 280 Heating powerW $ 60$ $ 120$	Mechanical data					
of tank above stacking collar)mm190 / 85150 / 135Interior dimensions W/D (tank below fill level marking)mm185 / 80140 / 125Fill level (tank base to fill level marking)mm4060Working height (basket base to fill level marking)mm3040Unterior dimensions of basket W/D/H (original accessories)mm155 / 70 / 35110 / 105 / 50Max. basket loading (original accessories)kg1,01,0Total volumeL0,91,6Recommended tank operating capacityL0,71,2Performance dataV309035155Ultrasonic power effective ±10 %W309035155Ultrasonic peak performance max.W240280120Heating powerW-60-120Heating powerW-60-120Heat	Max. external dimensions W/D/H (unit with cover)	mm	235 / 130 / 200		215 / 190 / 230	
fill level marking)mm4060Fill level (tank base to fill level marking)mm3040Working height (basket base to fill level marking)mm3040Interior dimensions of basket W/D/H (original accessories)mm155 / 70 / 35110 / 105 / 50Max. basket loading 	Max. opening dimensions W/D (inside of tank above stacking collar)	mm	190	/ 85	150	/ 135
marking) min 40 60 Working height (basket base to fill mm 30 40 Interior dimensions of basket W/D/H mm 155 / 70 / 35 110 / 105 / 50 Max. basket loading kg 1,0 1,0 1,0 / 0,0 Max. basket loading kg 1,0 1,0 1,0 / 0,0 Total volume L 0,9 1,6 Recommended tank operating L 0,7 1,2 Weight (unit with cover) kg 2,0 2,1 Performance data Total power consumption W 30 90 35 155 Ultrasonic peak performance max. W 240 280 Heating power W - 60 - 120	Interior dimensions W/D (tank below fill level marking)	mm	185	/ 80	140	/ 125
Initial level marking)Initial initialSo40Interior dimensions of basket W/D/H (original accessories)mm $155 / 70 / 35$ $110 / 105 / 50$ Max. basket loading (original accessories)kg $1,0$ $1,0$ Max. basket loading (original accessories)kg $1,0$ $1,0$ Total volumeL $0,9$ $1,6$ Recommended tank operating capacityL $0,7$ $1,2$ Weight (unit with cover)kg $2,0$ $2,1$ Performance data35155Ultrasonic power effective ± 10 %W 30 90 35 155Ultrasonic peak performance max.W 240 280 Heating powerW $ 60$ $ 120$ S. Elmasonic Easy $30, 30H, 40H$ Hot	Fill level (tank base to fill level marking)	mm	4	0	6	0
mm155 / 70 / 35110 / 105 / 50Max. basket loading (original accessories)kg $1,0$ $1,0$ Max. basket loading (original accessories)kg $1,0$ $1,0$ Total volumeL $0,9$ $1,6$ Recommended tank operating capacityL $0,7$ $1,2$ Weight (unit with cover)kg $2,0$ $2,1$ Performance dataTotal power consumptionW309035155Ultrasonic power effective ± 10 %W 30 240 280 Heating powerW $ 60$ $ 120$ Elimasonic Easy 30, 30H, 40H, 60H	Working height (basket base to fill mm 30 40		0			
kg1,0Total volumeL0,91,6Recommended tank operating capacityL0,71,2Weight (unit with cover)kg2,02,1Performance dataW309035155Ultrasonic power effective ±10 %W3035155Ultrasonic peak performance max.W240280Heating powerW-60-120	Interior dimensions of basket W/D/H (original accessories)		155 / 7	70 / 35	110 / 1	05 / 50
Recommended tank operating capacityL0,71,2Weight (unit with cover)kg2,02,1Performance dataV309035155Ultrasonic power effective ±10 %W309035155Ultrasonic peak performance max.W240280280Heating powerW-60-120 5.2 Elmasonic Easy 30, 30H, 40H, 60H	Max. basket loading (original accessories)			,0	1,0	
capacityL0,71,2Weight (unit with cover)kg2,02,1Performance dataW309035155Total power consumptionW309035155Ultrasonic power effective ±10 %W3035280Ultrasonic peak performance max.W240280Heating powerW-60-120S.2 Elmasonic Easy 30, 30H, 40H, 60H	Total volume	L	0	,9	1	,6
Performance data Total power consumption W 30 90 35 155 Ultrasonic power effective ±10 % W 30 35 155 Ultrasonic peak performance max. W 240 280 Heating power W - 60 - 120 S.2 Elmasonic Easy 30, 30H, 40H, 60H	Recommended tank operating capacity	L	0,	,7	1	,2
Total power consumptionW309035155Ultrasonic power effective ±10 %W303535Ultrasonic peak performance max.W240280Heating powerW-60-1205.2 Elmasonic Easy 30, 30H, 40H, 60H	Weight (unit with cover)	kg	2,	,0	2	,1
Ultrasonic power effective ±10 % W 30 35 Ultrasonic peak performance max. W 240 280 Heating power W - 60 - 120 S.2 Elmasonic Easy 30, 30H, 40H, 60H Image: Second Se	Performance data					
Ultrasonic peak performance max. W 240 280 Heating power W - 60 - 120 S.2 Elmasonic Easy 30, 30H, 40H, 60H Image: Compare the second secon	Total power consumption	W	30	90	35	155
Heating power W - 60 - 120 5.2 Elmasonic Easy 30, 30H, 40H, 60H - - - - - - - 120	Ultrasonic power effective ±10 %	W	30		35	
5.2 Elmasonic Easy 30, 30H, 40H, 60H	Ultrasonic peak performance max.	W	24	40	28	30
	Heating power	W	-	60	-	120
	5.2 Elmasonic Easy 30, 30H, 40H	, 60H				
	Elmasonic Easy	Unit	30	30H	40H	60H

Elmasonic Easy	Unit	30	30H	40H	60H
Mechanical data					
Max. external dimensions W/D/H (unit with cover)	mm	305 / 19	90 / 230	305 / 190 / 280	370 / 225 / 280
Max. opening dimensions W/D (inside of tank above stacking collar)	mm	235 / 135		235 / 135	300 / 150
Interior dimensions W/D (tank below fill level marking)	mm	220 / 120		215 / 115	280 / 130
Fill level (tank base to fill level marking)	mm	6	5	115	115

Working height (basket base to fill level marking)	mm	40		80	85
Interior dimensions of basket W/D/H (original accessories)	mm	195 / 105 /	/ 50	195 / 105 / 95	255 / 105 / 95
Max. basket loading (original accessories)	kg	1,0		3,0	5,0
Total volume	L	2,7		3,9	5,9
Recommended tank operating capacity	L	1,6		2,9	4,3
Weight (unit with cover)	kg	3,3		4,0	5,1
Performance data					
Total power consumption	W	80	280	320	550
Ultrasonic power effective ±10 %	W	80		120	150
Ultrasonic peak performance max.	W	320		480	600
Heating power	W	-	200	200	400

5.3 Elmasonic Easy 100H, 120H, 180H, 300H

Elmasonic Easy	Unit	100H	120H	180H	300H
Mechanical data					
Max. external dimensions W/D/H (unit with cover)	mm	380 / 315 / 280	380 / 315 / 330	405 / 375 / 330	575 / 375 / 330
Max. opening dimensions W/D (inside of tank above stacking collar)	mm	295 / 235	295 / 235	325 / 295	500 / 295
Interior dimensions W/D (tank below fill level marking)	mm	280 / 220	275 / 215	300 / 270	475 / 270
Fill level (tank base to fill level marking)	mm	115	165	165	165
Working height (basket base to fill level marking)	mm	85	135	130	135
Interior dimensions of basket W/D/H (original accessories)	mm	250 / 195 / 90	250 / 195 / 135	280 / 255 / 135	450 / 255 / 135
Max. basket loading (original accessories)	kg	6,0	7,0	8,0	10,0
Total volume	L	9,5	12,9	17,8	27,5
Recommended tank operating capacity	L	6,8	10,0	14,2	22,0
Weight (unit with cover)	kg	5,9	7,5	8,5	11,0
Performance data					
Total power consumption	W	550	1000	1000	1500
Ultrasonic power effective ±10 %	W	150	200	200	300

Elma Schmidbauer GmbH

5 Technical data

Ultrasonic peak performance max.	W	600	800	800	1200
Heating power	W	400	800	800	1200

5.4 Elmasonic Easy 10–300

Elmasonic Easy	Unit	10–40	60–300		
Mechanical data					
Drain connection thread	Inches	-	3/8		
Connection for hose internal \varnothing	mm	-	12		
Material (tank, enclosure)	-		Stainless steel		
Electrical data					
Mains voltage ±10%	V~	22	20 - 240 / 115 - 120		
Mains frequency	Hz		50 / 60		
Ultrasonic frequency -2.5 / +5.5	kHz		37		
Max. target temperature 25 – 80	°C	80 (Temperatu	re tolerance max. from -5 - +8)		
Degree of protection	-	IP 20			
Protection class	_		I		
Ambient conditions					
Temperature (transport)	°C		-15 - +60		
Temperature (operation, storage)	°C		+5 - +40		
Air pressure (transport, storage)	hPa		500 - 1010		
Permissible relative humidity (transport,	% r. h.	10 -	- 80, non-condensing		
Permissible relative humidity (operation)	% r. h.	80; non-co	ondensing under fluctuating temperatures		
Max. perm. altitude (operation)	m above sea level		+2000		
Overvoltage category	_		II		
Degree of contamination	-		2		
Sound pressure level LpAU*	dB		< 80		

*Measured sound pressure level with cover at a distance of 1 m.

6 **Product contents**

	Check delivery for damage to the packaging. Document any damage immediately (e.g. photo) ,and report it to the manufacturer or dealer.
Important	Check that all parts of the delivery are complete and undamaged.
important	Never put a damaged unit into operation.
	Dispose of packaging materials that are no longer required in an environmentally friendly manner.



Illustration 1: Product contents

1	Ultrasonic unit 10H – 300H (with heating)
2	Ultrasonic unit 10 – 30 (without heating)
3	Cover or, turned over, usable as a trip tray for a basket
4	Hose connector for drain (60H and up)
5	Network cable (IEC connector)
6	Manual (not shown)

7 Unit description



Illustration 2: Operating side/rear side

- 1 Warning of hot surfaces
- 2 Controls
- 3 Handle (30/30H and up)
- 4 Mains connection
- 5 Nameplate, not shown
- 6 Drain (60H and up)
- 7 Rotary knob, drain open/closed (60H and up)
- 8 Feet, non-slip
- 9 Blower (120H and up)

8 Controls

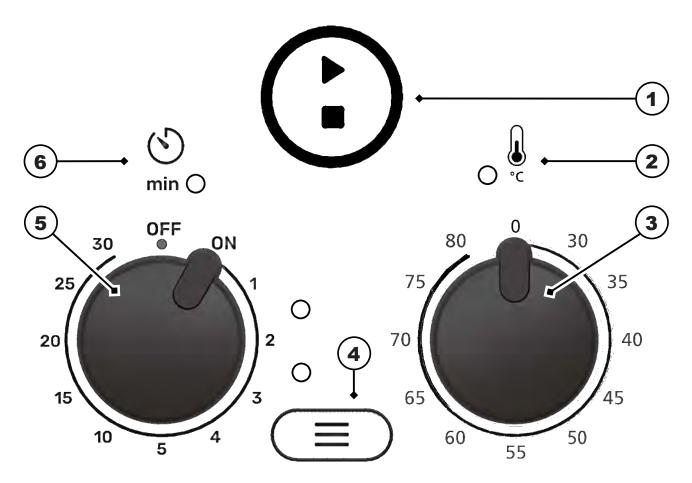


Illustration 3: Controls

- 1 Start/Stop button, switch ultrasonic cleaning on/off
- 2 LED temperature indicator (for units 10H–300H, with heating)
 flashes green for the duration of heating mode to reach the set temperature. Heating is on.
 lights up green once the set temperature is reached. Heating switches off once the set temperature is reached.
 flashes red or orange there is a fault, see Chapter Malfunctions/fault messages [> 24].
- Rotary knob for temperature 0–80 °C (for units 10H–300H, with heating), the temperature of the cleaning liquid can be set from 30–80 °C in 5 °C increments.
 0 = Heating off
- 4 **Mode button**, set the **dyn** (dynamic) or **eco** ultrasound mode; with **LED indicators** of the ultrasound modes **dyn** and **eco**, die LED indicator of the set ultrasound mode lights up.
- 5 Cleaning duration rotary knob ON/OFF, switch the unit on/off; set a cleaning duration of 1, 2, 3, 4, 5, 10, 15, 20, 25 or 30 minutes.
- 6 LED indicator for cleaning duration;
 flashes green for the duration of ultrasonic cleaning,
 lights up green when ultrasonic cleaning is complete,
 flashes red there is a fault, see Chapter Malfunctions/fault messages [▶ 24].

8.1 Operating modes

Operating mode	Description		
Switched off	The cleaning duration rotary knob is turned to OFF . All LEDs are off.		
Switched on	The cleaning duration rotary knob is turned to ON , or a cleaning duration of 1–30 minutes is set. The LED of the set ultrasound mode lights up.		
Safety switch-off with wake-up function	The unit is switched on. Automatic safety switch-off occurs after 8 hours of inactivity or in case of a brief interruption of the power supply. The LEDs turn off. The unit can be switched on again by pressing a button or turning the rotary knob.		
Ultrasonic cleaning	 Ultrasonic cleaning was started by pressing the Start/Stop button. The LED for cleaning duration flashes during ultrasonic cleaning. You can press Start/Stop again to terminate ultrasonic cleaning at any time. The LED for cleaning duration is off. 		
Ultrasonic cleaning complete	A brief audible signal is emitted at the end of the cleaning duration. The LED for cleaning duration lights up .		

9 Set up and connect the unit

9.1 Notes on installation site

The unit is designed to be set up in commercially used premises such as laboratories, medical practices, etc.

- The installation site must be well ventilated.
- The permissible ambient conditions are met.
- The unit must be installed on a sturdy, horizontal, non-slip, moisture-resistant work surface with the following characteristics:
 - The surface must be non-flammable.
 - There must be sufficient clearance above the unit to allow the cover and the objects being cleaned to be removed.
 - There must be an area available next to the unit for setting down the basket and inserts.
- Electrical connection conditions:
 - Splash-proof earthed socket near the unit (cable length approx. 1.5 m).
 - The power connection must be protected by a fault-current circuit breaker (RCD).
 - Ensure that the power supply required to operate the unit is available.
- Wastewater connection requirements:
 - Units without drains: select an installation site located close to a sink that can be used to empty the unit.
 - Units with drains: properly connect the unit drain to the on-site wastewater disposal system. If necessary, properly route the drain into a sink located nearby.
 - **CAUTION!** Use heat-resistant material.

9.2 Set up the unit

- ✓ Unpack the unit completely.
- ✓ Keep the cover and accessories, e.g. basket, inserts, etc. on hand.
- Place the unit on the selected surface.
 IMPORTANT The controls, such as the rotary knobs, buttons and, if applicable, discharge tap, must be clearly visible and easily accessible.
- → The unit has been set up.

9.3 Connect the unit

Connect the drain

- Obtain the required connection materials, e.g. suitable heat-resistant hose and hose clips (the hose is not included).
- 1. Unscrew the yellow plug from the drain.
- 2. Screw the included hose nozzle into the drain.
- 3. Push the hose onto the hose nozzle and secure it using the hose clip.
- 4. Connect the hose to the wastewater disposal system. If necessary, properly route the hose into a sink.
- 5. Check the drain for leaks. To do so, fill the tank with cold water up to around 1/3 of the fill level. Then, open the discharge tap to test all joints for leaks.
- 6. Seal any leaks found.
- → The drain is connected.

Connecting the network cable

- ✓ Ensure that the required power connection is available.
- 1. Plug the power cord into the IEC connector on the unit.
- 2. Route the power cord in such a way that it does not pose a tripping hazard, cannot be damaged and is not exposed to moisture. The power cord must not touch the unit housing, as the housing becomes hot during operation.
- 3. Connect the plug. The plug must be easily accessible so that it can be disconnected in emergencies.
- → The power supply has been connected.

10 Fill the tank

Suitable cleaning liquids for ultrasonic cleaning are:

- Water
- Softened water
- Distilled water

Cleaning power can be improved by adding aqueous cleaning agents. See Metering cleaning agent.

- \checkmark The unit and the tank are clean and, if necessary, disinfected.
- ✓ The recommended tank operating capacity for the relevant unit sizes is stated in the technical data. See Technical data [▶ 9].
- ✓ The unit is ready to use.
- 1. Add the fluid to the tank up to the fill level marking using, for example, a measuring jug. The fill level marking is the stacking collar (1). For unit sizes without stacking collars, the fill level is approx. 1.5 cm beneath the tank edge.

CAUTION! An overfilled tank can cause the cleaning fluid to boil over at high temperatures.



- 2. The process of adding cleaning agents is explained in chapter Metering cleaning agent.
- 3. Fresh liquid must be degassed approx. 10 minutes prior to ultrasonic cleaning. See Degassing the liquid [▶ 18].

IMPORTANT It is important to degas freshly inserted ultrasonic cleaning baths to remove any air bubbles and dissolved gases that may be present in the cleaning liquid. Failure to remove these gases will negatively impact cleaning power.

 \Rightarrow The tank has been filled.

Insert a basket:

1. Hang the basket filled with the items to be cleaned in the tank.

IMPORTANT The fill level in the tank will increase once the basket or insert is placed inside. This may cause the tank to overflow in the case of full baskets or dosages > 5%. To avoid this, do not fill the tank right up to the fill level marking in such cases and fill the remaining space once the basket has already been inserted.

- 2. **IMPORTANT!** The objects being cleaned must be completely submerged in the fluid to achieve good cleaning results. If necessary, reduce the number of objects being cleaned.
- ➔ The tank is full, cleaning agent has been dosed (if necessary), liquid has been degassed and the basket has been inserted. Ultrasonic cleaning can be started.

10.1 Dosing cleaning agent

Cleaning power can be improved by adding aqueous cleaning agents.

A WARNING! Please follow the safety instructions and instructions for use and observe the mixing ratio for the cleaning agent used!

Dosing information for the different unit sizes and typical volume concentrations are shown in the following table.

Device size	Tank operating capacity	Dosing quantities in mI for following concentra- tions:			
Volume concentration in %		1%	2%	3%	5%
	1 l/1000 ml	10 ml	20 ml	30 ml	50 ml
EASY 10/10H	0.7 l / 700 ml	7 ml	14 ml	21 ml	35 ml
EASY 20/20H	1.2	12 ml	24 ml	36 ml	60 ml
EASY 30/30H	1.6 I	16 ml	32 ml	48 ml	80 ml
EASY 40H	2.9	29 ml	58 ml	87 ml	145 ml
EASY 60H	4.3 I	43 ml	86 ml	129 ml	215 ml
EASY 100H	6.8 I	68 ml	136 ml	204 ml	340 ml
EASY 120H	10 I	100 ml	200 ml	300 ml	500 ml
EASY 180H	14.2 I	142 ml	284 ml	426 ml	710 ml
EASY 300H	22	220 ml	440 ml	660 ml	1.1

✓ The aqueous cleaning agent is chosen based on the type of cleaning desired.

WARNING! Do not use flammable cleaning agents! See Use of cleaning agents [▶ 8].

- ✓ The unit is filled with liquid (e.g. water) up to the recommended tank operating capacity. See Fill the tank [▶ 17].
- 1. Find the dosing quantity for the required concentration in the table and add the liquid to the unit.
- 2. Stir the cleaning liquid to mix. Stirring is also achieved by degassing the cleaning liquid. See Degassing the liquid [▶ 18].
- → The cleaning agent is dosed into the liquid. For further steps, see Fill the tank [▶ 17].

10.2 Degassing the liquid

Degassing of the liquid results in the following advantageous ultrasound effects:

- Improves the cleaning effect of the ultrasound.
- Stabilises the cleaning process.
- Ensures optimal mixing of the cleaning liquid.
- Improves the spatial temperature distribution in the liquid.

Procedure

- ✓ The unit is ready to use.
- ✓ Fresh liquid has been added to the tank.
- ✓ Cleaning agent has been added to the liquid, if applicable.

- ✓ The basket with the objects to be cleaned is not inserted.
 NOTICE! Always degas the liquid without the basket and objects.
- 1. Set the cleaning duration to 10 minutes. See Set the cleaning duration [> 20].
- Start ultrasound mode *dyn* (dynamic). See Changing ultrasound mode [▶ 21].
 NOTICE! Degassing can also be carried out with another ultrasound mode if the unit does not have the dyn ultrasound mode.

⇒Let the unit run for at least 10 minutes in the set ultrasound mode.

→ The liquid has been degassed.

11 Insert objects to be cleaned

- Ensure that all optional original accessories e.g., baskets or inserts for holding the objects being cleaned, are available.
 IMPORTANT Do not place objects on the bottom of the tank. The tank and the objects can be damaged through ultrasonic operation.
- 1. Position the basket or insert next to the unit. The cover can be used as a mat.
- Place the objects inside the basket or insert without overfilling it. Arrange the objects being cleaned in such a way that fluid will be able to circulate around them without obstructions.
 IMPORTANT Only clean objects that are suitable for ultrasonic operation, the set temperature and, where applicable, the cleaning agent in use. In case of doubt, contact the manufacturer or dealer.
- 3. Hook the filled basket or insert inside the tank.
- → The objects being cleaned have now been inserted.

12 Operating the unit

WARNING

Damage caused by noise emissions



Hearing damage!

- > When working with the unit in ultrasound mode, cover it with the lid or wear hearing protection.
- Pregnant women must not spend long periods of time near an ultrasonic unit in operation.
- > Keep animals away from the ultrasonic unit.

CAUTION



Burns or scalds.

 \succ Do not reach into the tank.

Hot liquid, vapours and unit parts!

When working at high cleaning temperatures (> 50 °C), only touch baskets, covers and inserts wearing suitable protective gloves or allow them to cool before touching them.

CAUTION



Dry running!

Damage to the tank and unit.

- > Always fill the tank with fluid up to the fill level marking before operating the unit.
- > Never operate the unit without cleaning fluid.
- > Regularly monitor the filling level.

There are two options for setting the cleaning duration for ultrasonic cleaning:

• Ultrasonic cleaning in continuous operation, cleaning duration rotary knob ON:

Ultrasonic cleaning can be started or stopped at any time by pressing the *Start/Stop button*. **Important!** In the **ON** (continuous operation) rotary knob position, the cleaning duration automatically stops after a maximum of 6 hours.

• Timed ultrasonic cleaning operation, cleaning duration rotary knob 1–30 minutes:

Ultrasonic cleaning stops automatically after the set time or at any time by pressing the *Start/Stop button*.

12.1 Set the cleaning duration

- The unit is ready to use.
- The unit is filled with liquid.
- The cleaning agent has been metered and added, if applicable.
- The liquid is degassed.
- The objects to be cleaned have been inserted.
- The unit is covered with the cover.



⊚ dyn



Turn the cleaning duration *rotary knob* to **ON** to switch on the unit for up to 6 hours.

Alternatively, turn the cleaning duration *rotary knob* directly to a time of 1, 2, 3, 4, 5, 10, 15, 20, 25 or 30 minutes to switch on the unit for a specific cleaning duration.

The LED indicator of the ultrasound mode ready for operation lights up.

The heating system begins heating up the cleaning liquid if a temperature is set. The LED indicator for heating flashes green.

The LED indicator for heating is off if a temperature is not set. The temperature rotary knob is set to 0.

The cleaning duration is set. The cleaning duration stops automatically after the set time.

12.2 Changing ultrasound mode

Dyn (dynamic) Used for more intensive cleaning with greater cleaning power.

eco Used for gentle cleaning and quieter operation.

The cleaning duration is set.



Press the *Mode button* to change the ultrasound mode.

🔘 dyn

The LED indicator of the set ultrasound mode lights up.

 \bigcirc eco



The ultrasound mode has been changed.

12.3 Setting cleaning temperature

For units without heating, go straight to Chapter Starting/stopping ultrasonic cleaning [> 22].

The cleaning duration is set.

The ultrasound mode has been changed, if applicable.



Turn the temperature *rotary knob* to the required temperature to set the cleaning temperature. The temperature can be set from 30–80 °C in 5 °C increments. The heating system immediately begins heating up the liquid.



The LED indicator for temperature flashes green until the set temperature is reached. Heating is on.

The LED indicator for temperature lights up green as soon as the set temperature is reached. Heating is off.

For even heating of the cleaning liquid, we recommend switching on ultrasonic operation whilst heating up.

CAUTION! As a result of ultrasonic operation, especially in continuous operation, the cleaning liquid is heated up in addition to heating mode!

Alternatively, stir the cleaning liquid occasionally to achieve even heating.



The cleaning liquid is heated up.

Ultrasonic cleaning can occur at the required temperature.

12.4 Starting/stopping ultrasonic cleaning

The cleaning liquid also heats up in ultrasonic operation without heating. Especially during continuous operation, the cleaning liquid can become hot due to ultrasonic operation.

The cleaning duration is set.

The ultrasound mode has been changed, if applicable.

The cleaning temperature is set (for units with heating).



Press the *Start/Stop button* to begin ultrasonic cleaning. Ultrasonic cleaning stops automatically after the set time.

The LED indicator for cleaning duration flashes green during ultrasonic cleaning.

The LED indicator for cleaning duration lights up green when ultrasonic cleaning is complete. A brief audible signal tone also alerts you to the end of cleaning.



Press the *Start/Stop button* again to stop ultrasonic cleaning before the end of the set cleaning duration. The LED indicator for cleaning duration will go out.

Important! Check the temperature of the cleaning liquid regularly, especially when cleaning sensitive objects.

If the cleaning temperature is too high, allow the cleaning liquid to cool down or replace the cleaning liquid.



Ultrasonic cleaning is complete. Check the cleaning result.

NOTICE! Automatic safety shut-off is activated after 8 hours of unit inactivity. The LEDs turn off. The unit can be switched on again by pressing a button or turning a rotary knob.

12.5 Remove cleaned objects

- ✓ The end of ultrasonic cleaning is indicated by the End of cleaning symbol or, where applicable, an acoustic signal.
- 1. Carefully remove the lid, and allow any dripping water to drip into the tank. Then, place the lid upside down next to the unit to use as a drip tray.

CAUTION! If using high cleaning temperatures > 50 °C, allow the liquid to cool down first or use suitable heat-insulating protective gloves.

2. Lift the basket or insert out of the tank, allow the excess fluid to drain briefly, and place it on the upturned lid.

⇒The objects are now clean. Check the cleaning result.

- → Check the fill level if you intend to start another ultrasonic cleaning process.
- → Switch off the unit. If the fluid is dirty or will not be used again, empty out the liquid. See the section Draining the unit for information.

13 Drain the unit

CAUTION



Hot liquids

Danger of burns and scalds caused by spilled fluid!

- \succ Do not move or carry the unit when full of liquid.
- The exception to this is small units without a drain. Allow the liquid to cool down before emptying and disconnect the mains plug.

Emptying units with drains:

- ✓ Ultrasound operation has finished.
- ✓ The basket or insert has been removed.
- \checkmark The drain (1) is connected to an on-site wastewater disposal system.
- 1. Open the discharge tap (2) to drain off the cleaning fluid.
 - ⇒The tank is empty.
- 2. Clean and, if necessary, disinfect the tank. See Chapter Maintenance [▶ 25]. ▲ CAUTION! Never submerge the unit in water.
- → The unit is emptied, cleaned and, where necessary, disinfected.



Emptying a unit without a drain

- ✓ Ultrasound operation has finished.
- ✓ The basket or insert has been removed.
- ✓ If using temperatures > 50 °C, allow the cleaning fluid to cool.
- 1. Disconnect the network cable.
- 2. Put the cover on.
- 3. Firmly take hold of the unit by the handles while holding the cover in place, and carry it carefully to a sink.
- 4. Remove the cover.
- 5. Slowly tip the unit over the sink with one corner at the lowest point, and carefully pour out the cleaning fluid.

⇒The tank is empty.

- 6. Clean and, if necessary, disinfect the tank. See Chapter Maintenance [▶ 25]. ▲ CAUTION! Never submerge the unit in water.
- → The unit is emptied, cleaned and, where necessary, disinfected.

14 Malfunctions/fault messages

14.1 Troubleshooting

Fault	Possible cause	Resolution
No LEDs are lit	Unit is not switched on, safety switch-off has been triggered or there is no power supply	 Turn rotary knob or press button Switch on the unit Check that the power cable is correctly connected and undamaged; replace if necessary Check power supply
Buttons/rotary switches indicate no function	Controls defective	Contact the manufacturer.
Ultrasonic operation does not start	Ultrasonic unit defective	Contact the manufacturer.
Cleaning liquid does not heat up (applies for units with heating)	Heating defective	Contact the manufacturer.

14.2 Fault messages

If a fault occurs, various different flashing patterns indicate the fault type. Ultrasonic operation always switches off if a fault occurs.

LED	Flashing pattern	Fault type	Possible remedies
min 🕌	Flashes red twice, pauses, repeats	Power supply faulty	Connect the unit to a socket of a different power circuit
(€) min ∰	Flashes red three times, pauses, repeats	Ultrasonic performance faulty (too high or too low)	Switch unit off, switch on again after 1 minute and restart cleaning Increase or decrease liquid level, if applicable
∭ min ≱	Continuously flashes red	All other faults	Contact service centre or manufacturer
S S S S S S S S S S S S S S S S S S S	Continuously flashes or- ange (applies for units with heating)	Max. temperature > 90 °C reached	Switch unit off and allow the cleaning liquid to cool down, disconnect unit from the mains if necessary
¢ € € C	Continuously flashes red (applies for units with heating)	Faulty temperature sensor	Contact service centre or manufacturer

Contact the service centre or the manufacturer in the following cases:

- The measures described here do not remedy the fault.
- The fault recurs (repeatedly), even after performing the following measures:
 - The unit was disconnected from the mains and plugged in again about 1 minute later, and cleaning started again.
- The unit must be repaired at the factory.

IMPORTANT Empty the unit completely, and clean and disinfect it thoroughly before sending it for repair.

15 Maintenance



CAUTION

Faulty power cord

Electric shock or damage to the device

> Check the power cord regularly for damage.

IMPORTANT Keep the unit and tank clean and dry to prolong its service life. Regularly remove all dirt residues and accumulated dust from the blower.

15.1 Replace the network cable

- ✓ The network cable or plug contacts are visibly damaged.
- Replace damaged network cables immediately.
- NOTICE! Removable network cables may not be replaced with insufficiently measured network cables!
- → The network cable has been replaced.

15.2 Clean enclosure

- \checkmark The enclosure is dirty.
- ✓ The network cable is unplugged.
- Wipe all surfaces using a damp cloth.
 MARNING! Do not spray the outside of the unit with water.
- → The enclosure has been cleaned.

15.3 Cleaning the tank

- ✓ The tank is full of limescale or dirty.
- \checkmark The tank is empty.
- 1. Use a damp cloth to wipe out limescale and dirt residue. If necessary, rinse the tank using a shower set.

CAUTION! Do not spray the outside of the unit with water.

⇒The tank has been cleaned.

- 2. To descale the tank, fill it with tap water up to the fill level marking in the tank.
- 3. Heat up the unit to 40 °C.
- 4. Add 4–10% of Elma clean 60 or Elma clean 115C.
- 5. Once 40 °C has been reached, switch off the unit.

 \Rightarrow Leave the solution to work for approx. 12 hours.

- 6. Then, switch on eco ultrasound mode for approx. 15 min.
- 7. Empty the tank.
- 8. Use a damp cloth to wipe out the remaining limescale and dirt residue. If necessary, rinse the tank using a shower set.

CAUTION! Do not spray the outside of the unit with water.

→ The tank has been descaled and cleaned.

15.4 Disinfect

We recommend the following disinfectants for wiping the unit:

- · Incidin Liquid by Ecolab (ready-to-use, quick disinfectant).
- Terralin protect by Schülke (observe dosage and exposure time).
 - Disinfect the tank and the enclosure using a commercially available surface disinfectant on a regular basis. A CAUTION! Test the disinfectant on a small area first to ensure it does not affect the materials, particularly the controls.
- → The unit has been hygienically disinfected.

15.5 Clean the blower and check that it is working correctly (sizes 120 and up)

Dust and dirt adhering to the protective grille of the blower can impair the cooling performance or cause unit malfunctions.

- Regularly remove accumulated dust and dirt.
- ✓ The unit is ready for operation and filled with fluid to enable the functions to be checked.
- 1. Heat up the unit to approx. 55 °C.
- 2. The blower will start after > 50 °C is reached.

 \Rightarrow If the sound of the blower is clearly audible, the blower is working.

⇒If no sound can be heard from the blower, send the unit for repair immediately.

- 3. Switch off the unit.
- → The blower function has been checked.

16 Disposal

CAUTION

Once the unit has reached the end of its service life, ensure that the unit and accessories are disposed of safely and correctly:



- > Clean and disinfect the old device and accessories before disposal.
- Do not dispose of old devices with household waste, but instead at the local collection and disposal points.
- Secure the old device against unauthorised access until removal; if necessary, dispose of the power cable separately.
- > Observe regionally applicable disposal directives.
- Data protection notice: The end user is responsible for deleting personal and confidential data from the unit being discarded.